



# MECHANICAL AIR SCALE

Our exterior mechanical load scales are ideal for those that simply want to monitor and maintain legal weights. The exterior mechanical scales are easy to install and calibrate. Specific models are available for tandem and triple axle configurations. The larger 3 ½ inch gauge comes mounted in a custom, weather resistant enclosure with a push-pull valve to bleed the pressure out of the gauge when it is not in use.

PART #: 100-666 Air Scale 2 axle \$290 Current MSRP

PART #: 100-667 Air Scale 3 axle \$290 Current MSRP

**\*\*\*Mention our website at the time of the order and receive special pricing \$270 for 2 or 3 axle Air Scale\*\*\***



**WARNING: This gauge may not be reliable when overloaded**



# CALIBRATION



**Step 1:** With a fully loaded truck, park on level ground, chock the wheels and turn off the parking brake.

**Step 2 :** Pull the valve all the way out to activate the scale



**Step 3:** Using a screwdriver, adjust the calibration screw so that your scale matches the certified scale ticket weight for the axle group it is monitoring

**Step 4:** Write the date and the certified scale weight in the calibration log. Calibration should be checked every 6 months. You are now ready to go!

